


57 Galaxy Blvd., Units 1 & 2, Toronto, ON M9W 5P1 TEL: (416) 231-6767 www.drivecentre.ca

з.з.з ОРТДз

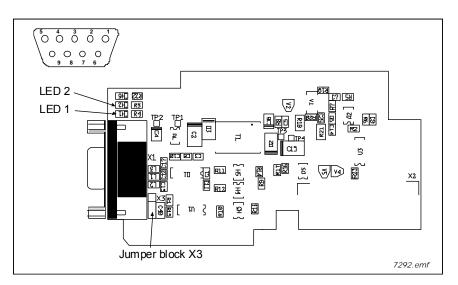

Description:	RS-232 adapter board. Galvanically decoupled. Used mainly for application engineering to connect another keypad.	
Allowed slots:	D, E.	
Type ID:	17459	
Terminals:	9-pin female sub-D-connector	
Jumpers:	1; X3 (see page 78)	
Board parameters:	None	

I/O terminals on OPTD3

Terminal		Technical information
1		
2	TxD	Transmit data
3	RxD	Receive data
4		
5	GND	Ground isolated
6	+9V	+9V isolated
7		
8		
9		


Table 43. (OPTD3 I/O	terminals
-------------	-----------	-----------

NOTE:

If OPTCI Ethernet Option board is used for NC Tools connection, like NCLoad, the OPTD3 board cannot be used.

Jumper selections

There is one jumper block on the OPTD3 board. The factory defaults and other available jumper selections are presented below:

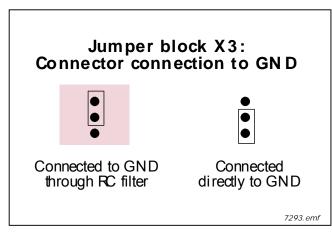

OPTD3 option board status LEDs

Table 44	
----------	--

LED	Meaning
Green (LED 1)	Receiving data
Red (LED 2)	Transmitting data